


Fingerprint Cabinet Lock

FP – 101 Installation instruction


1) **Make hole in Cabinet door:**

Select appropriate height at which you want to install the lock. The same lock body can be used for right or left side door.

From appropriate distance from the inside wall of the side panel mark a central point. Then 40 mm above this and 40mm below this drill 2 holes of 10 mm each. Make a cutout in front of the connector for the connector wire to pass through. Make sure the connector wire is not damaged while installing.

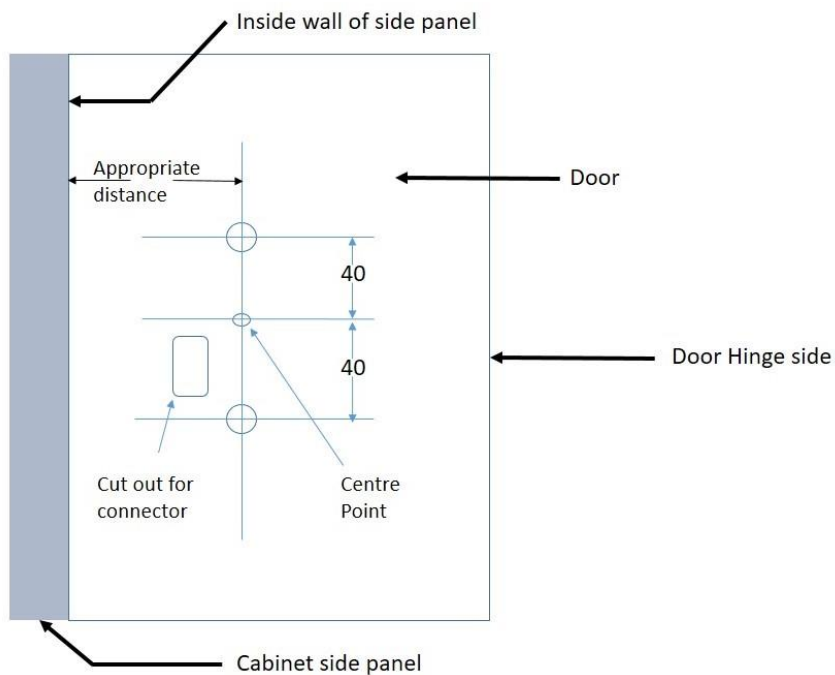

2) Install fingerprint reader and lock body

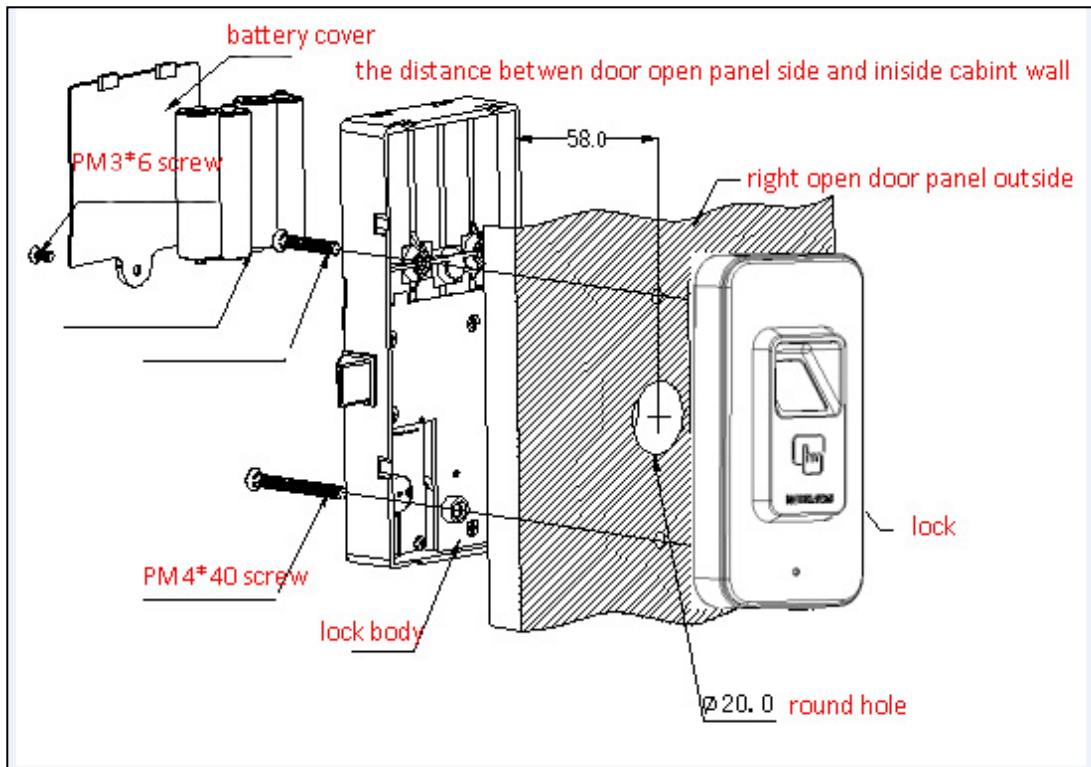

Remove the battery cover and batteries. Pass the wire through the 20mm middle hole & connect it to the lock body connector. Install the reader and lock body using the screws provided, and as shown in the diagram, if door thickness is less than 15mm you will have to shorten the longer 4*40 screws. For 12mm thick door shorten it by 3mm.

3) Fix the side catch:

On the inside wall of the side panel at appropriate height fix the side catch with the 3 4*16 screws provided. The pushpin will be facing outside.

